

Who is Bactronix®?

Bactronix is a science based microbial control company that helps to create healthier environments, using our eco-responsible products.

The exclusive Two-Step Bactronizing™ Process is applied with an advanced electrostatic delivery system. The Two-Step process will eliminate bacteria, viruses, mold and odor.


Our Goal

Bactronix® goal is to promote environmental health, safety and wellness. Cross Contamination and the spread of dangerous bacteria can occur where you have close contact with other people. To protect employees, Bactronix® has developed a high performance, environmentally friendly disinfecting technology. Our Bactronizing® Process will improve the level of health and safety standards.



In addition to disinfecting products and electrostatic spray equipment, Bactronix provides the following services:



- Testing for mold, bacteria, viruses and odor
- Disinfecting & Sanitizing
- Mold Remediation
- Air Duct Cleaning & Disinfecting
- Dryer Vent Cleaning

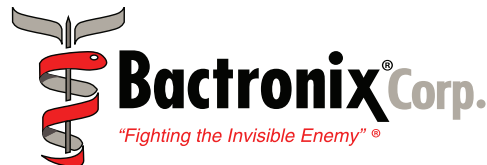


500 Lindbergh Dr | Suite 530
Moon Twp, PA 15108

1-855-515-3231
www.bactronix.com

info@bactronix.com

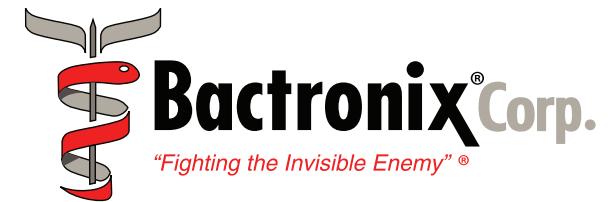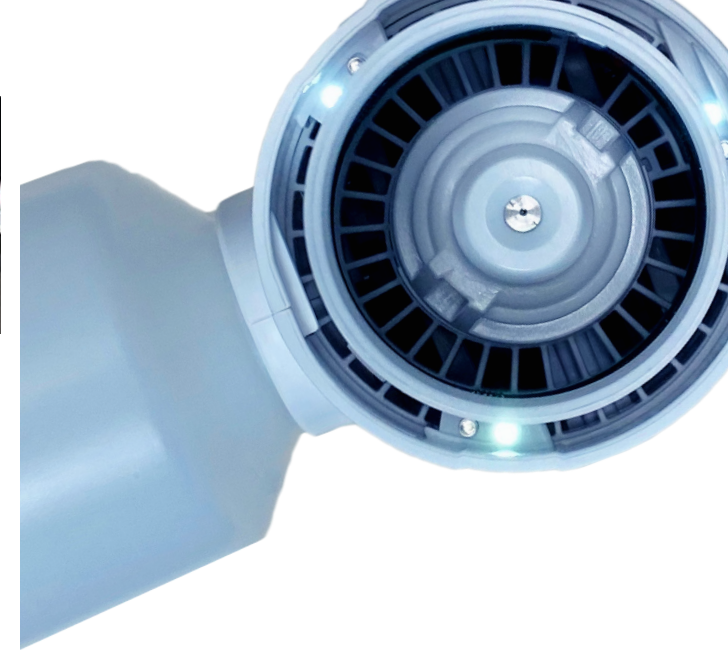

The Bactrogun 2 N 1
Handheld Electrostatic Sprayer

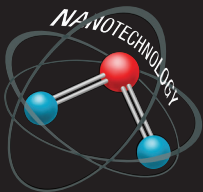

THE BACTROGUN 2N1

Cordless, Handheld Electrostatic Sprayer is highly effective for disinfecting purposes with BactroKill Plus and BactroBlock and has an exclusive built-in feature for UV disinfecting.



FEATURES:

- Dual Function Technology (2 in 1) combines electrostatic spraying and UV disinfecting
- Electrostatic 360-degree disinfecting coverage
- Ergonomic lightweight design
- 90 Minute run time on a single charge

Specifications:

Unit weight 4.5 lbs. (excl. battery and liquid)

24 Volt Battery with 90-minute run time

Droplet size: 30 - 70 microns

Spray reach: 6 ft. or more

Capacity: unit produces 2.7 - 4.1 oz. per minute

Surface area capacity: approximately 2000 square feet per hour (product requirement: 1.6 gallons for 2000 square feet of surface area).

Bottle: HDPE 24 Oz. with screw top for quick and easy refills

Advanced Technology

The patented system provides a charge to the spray solutions and produces a thin, even spray on the surfaces. This touchless electrostatic spray even wraps around very difficult to reach surfaces, shadowed, vertical and underneath. The lightweight unit provides 3x more coverage in the same amount of time than traditional sprayers while using less product.



BactroKill Plus

EPA Registered, Hospital Disinfectant



BactroBlock

EPA Registered, Antimicrobial Protectant

Combine the power of BactroKill Plus, our EPA registered, Hospital Grade disinfectant, BactroBlock, EPA registered, residual protectant with the BactroGun 2 N 1 and you have the perfect, most economical set-up for disinfecting small to medium size projects.

