




## Bactronix Initiates HDT *Hyper Disinfection Technology*

Provides 100% surface coverage of Bactronix Eco-friendly BactroKill Plus® and BactroBlock® products.

Bactronix engineered the first LEAN inspired EVS cart. Ergonomically styled and equipped with advanced electrostatic spray technology. The BactroKart RRB-1500 empowers the workforce with technology that makes cleaning, disinfecting and sanitizing fast, easy and more effective.

### FAST / EASY / EFFECTIVE

- ✓ Bactronix has engineered a revolutionary high-performance portable EVS cart with three reservoirs for multi-purpose cleaning, disinfecting and sanitizing operations.
- ✓ BactroKart RRB-1500 is ideal for cleaning, disinfecting and sanitizing operations: medical facilities, food processing operations, schools, institutions, commercial, industrial, hospitality, HVAC and more.
- ✓ LEAN inspired for ease of operation, increased productivity, waste reduction and the capability of switching products on the fly.

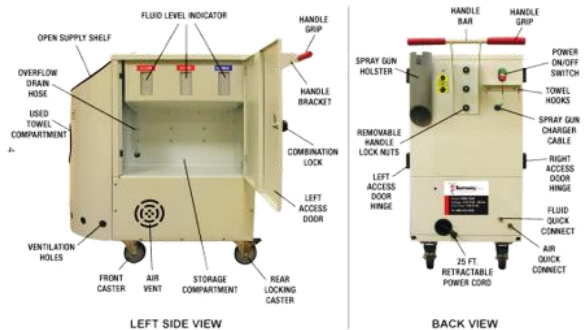

BACTROKART RRB-1500 PARTS DIAGRAM



## Maximize Coverage and Efficiency in Less Time

HDT provides a 360° application for 100% coverage on all surfaces even hard to reach and hidden areas to kill bacteria and destroy dangerous biofilms.

### SCHOOLS



Staph / Influenza / Virus  
<https://bestlifeonline.com/most-common-classroom-germs>

### FOOD PROCESSING



Salmonella / E. coli / Microbial Biofilms  
<https://fstjournal.org/features/bacteria-food-production-environment>

### MEDICAL



MRSA / VRE / Pseudomonas  
<http://www.sixwise.com/Newsletters/2010/November/21/Eight-Deadliest-Superbugs-Found-Daily-in-Hospitals.htm>

Uses 70%  
Less  
Solution




# ADVANCED ELECTROSTATIC spray technology

**1** Atomized droplets pass an electrode inside the nozzle. Negatively charged electrons are attached to the droplets.

**2** The droplets will reverse direction and move against gravity by 75 times it's weight to coat even hidden surfaces.

**3** Negatively charged droplets are carried in an air stream towards the surface. Electromagnetic force fields cause the droplets to wrap around the target and bond to its surface.

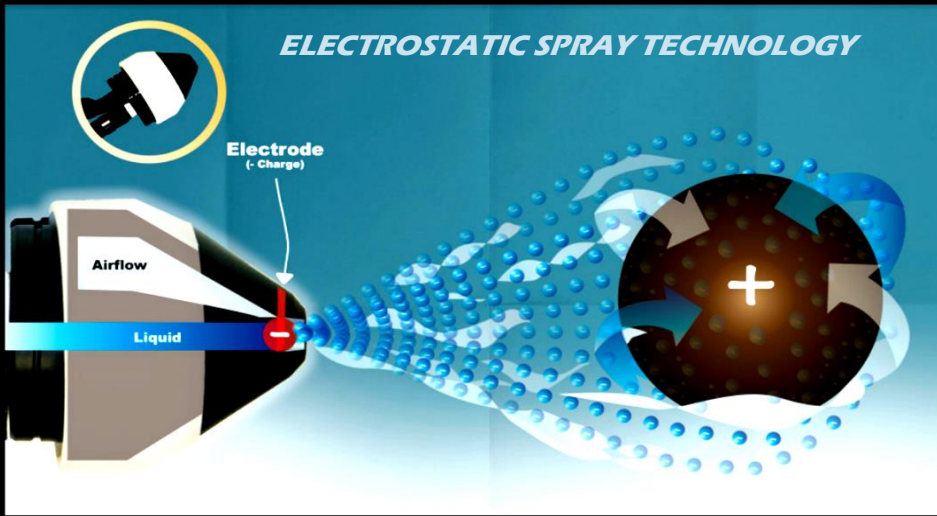

## BactroPAC hp – Empower your Workforce On-Site Portable Intuitive Disinfection System

High Performance backpack engineered with self-contained air compressor and electrostatic delivery system.

## Reduce Utility Costs and Improve Efficiencies!

BactroKill Plus 6:1 dilution is an EPA approved Final Rinse Sanitizer for Direct Food Contact Surfaces.



**BactroKill Plus®** passed the Germicidal EPA Halide AOAC International Official Method 955.16 for (no-growth) achieving efficacy results >99.999% log reduction.

### Kills Bacteria in 60 Seconds

- Salmonella enterica (ATCC #10708)
- Staphylococcus (ATCC #6538)
- MRSA (ATCC # 33591)
- VRE (ATCC #512199)
- Hepatitis B (ATCC #E1053)
- Canine Parvo (ATCC #VR-953)
- Pseudomonas aeruginosa (ATCC #15442)



**BactroBlock®** provides antimicrobial residual on porous and non-porous surfaces for up to 90 days.



### Bactronizing®

- ✓ Kills Bacteria
- ✓ Destroys Biofilm
- ✓ Eliminates Odor
- ✓ HVAC Approved

Bactronix, Corp.  
Airsides Business Park  
530 Lindbergh Drive  
Moon Township, PA 15108  
Contact: A.J. Powell 412.375.7886  
ajpowell@bactronix.com / www.bactronix.com