

APPLICATION

The general purpose non-intrusive capacitance level switch is a great choice for highly corrosive or ultra-pure, aqueous based liquids with non-coating and/or scaling characteristics. Media examples include deionized water and hydrochloric acid. The IA relay provides a reliable switch interface with remote devices such as a PLC, SCADA or alarm. The sensor is bracket mounted on the exterior wall of non-metallic tanks.

FEATURES

- ✓ Non-intrusive level detection through plastic or fiberglass tank walls with a maximum thickness of 1"
- ✓ PE, PVC, PP or PVDF mounting bracket designed for adhesive and plastic tack-weld installation


TECH TIP

With two calibration adjustments, the non-intrusive switch set point will be customized to your specific tank wall thickness and application media.



SPECIFICATIONS


Tank mounting:	Non-intrusive
Tank mat. comp.:	Non-metallic
Tank wall thick.:	< 1" (25 mm)
Accuracy:	± 1 mm in water
Repeatability:	± 0.5 mm in water
Dielectric range:	> 10 constants
Conductive range:	> 100 micromhos
Supply voltage:	12-36 VDC
Consumption:	25 mA maximum
Contact type:	(1) SPST relay
Contact rating:	60 VA
Contact output:	Selectable NO/NC
Process temp.:	F: -40° to 176° C: -40° to 80°
Enclosure rating:	NEMA 4X (IP65)
Enclosure mat.:	PSO
Conduit entrance:	Single, 1/2" NPT
Bracket material:	1005: PP 5005: PVDF 6005: PE
Bracket mounting:	3M adhesive / plastic thermal weld
Cable jacket mat.:	PP
Cable type:	4-conductor, #22 AWG (shielded)
Cable length:	Standard: 10' (3m) Special order: 25' (7.6m) or 50' (15.2m)
Classification:	General purpose
CE compliance:	EN 61326 EMC EN 61010-1 safety

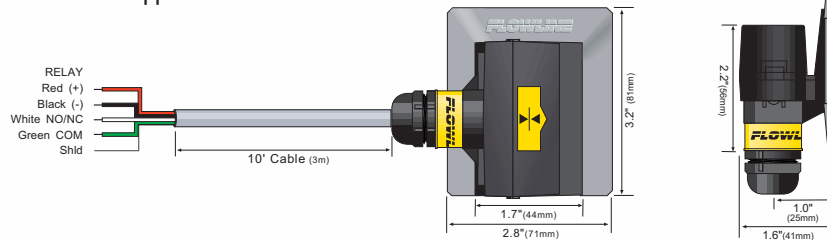

Capacitance ORDER

LP50- 005

- Bracket material (1) (2) (3)
- 1 PP
 - 5 PVDF
 - 6 PE

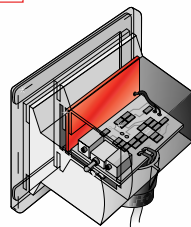

Ordering Notes

- 1) Select the bracket that matches the tank wall material in your application.
- 2) Each sensor comes with one user specified bracket. Additional brackets may be ordered separately for multiple installation points:
LP95-1001: PP bracket
LP95-5001: PVDF bracket
LP95-6001: PE bracket
- 3) To special order a 25' (7.6m) or 50' (15.2 m) sensor cable, place the cable length at the end of the part number (ie: LP50-6005-25').