


Pressure Switch Quick Guide Model PS111

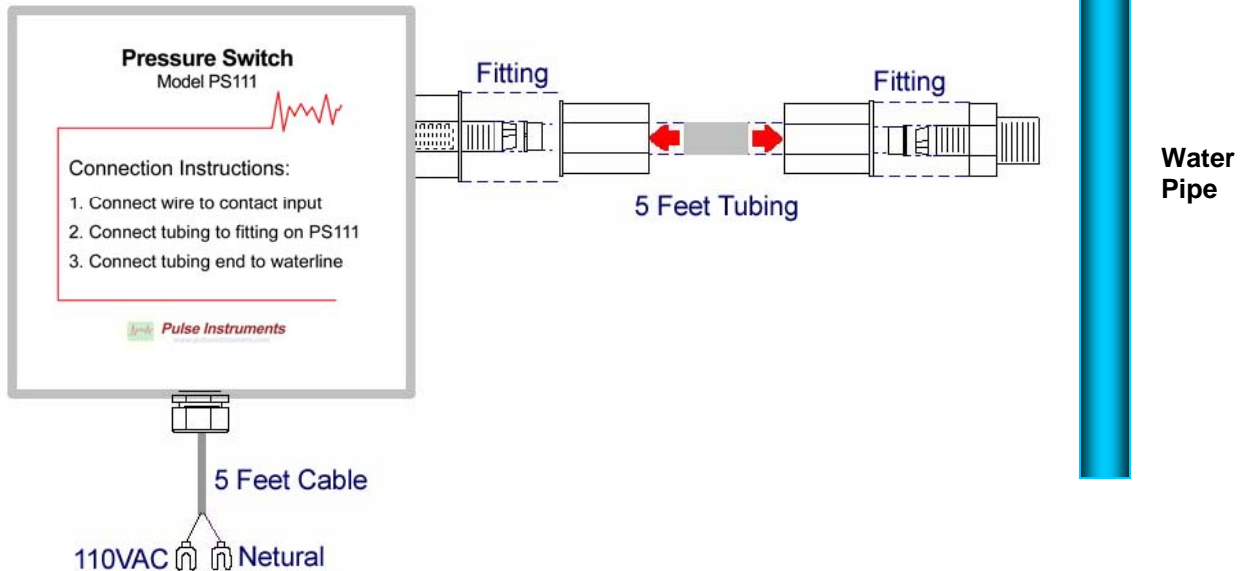

Overview

PS111, pressure switch with NEMA 4X is designed to make a dry contact in the event of a change in the flow followed by a change of pressure. It may be used as a flow switch. The sensitivity of the pressure switch can be adjusted by turning the dial inside of the receptacle (see picture on the right). For high pressure, reduce sensitivity and loosen the dial. For low pressure, increase sensitivity and tighten the dial.

PS111 is easy to use and simple to install. Fittings, 5 foot cable with terminal forks, along with a 5 feet tubing are provided in the package.



Specification

Pressure (MAX): 100 PSI

Adjustable Range: 1.5 – 15 PSI

Connection Instructions

1. Connect wire (from 5 feet wire cable) to contact input.
2. Connect tubing to fitting on PS111.
3. Connect tubing end to the water pipe.